

FIG. 1

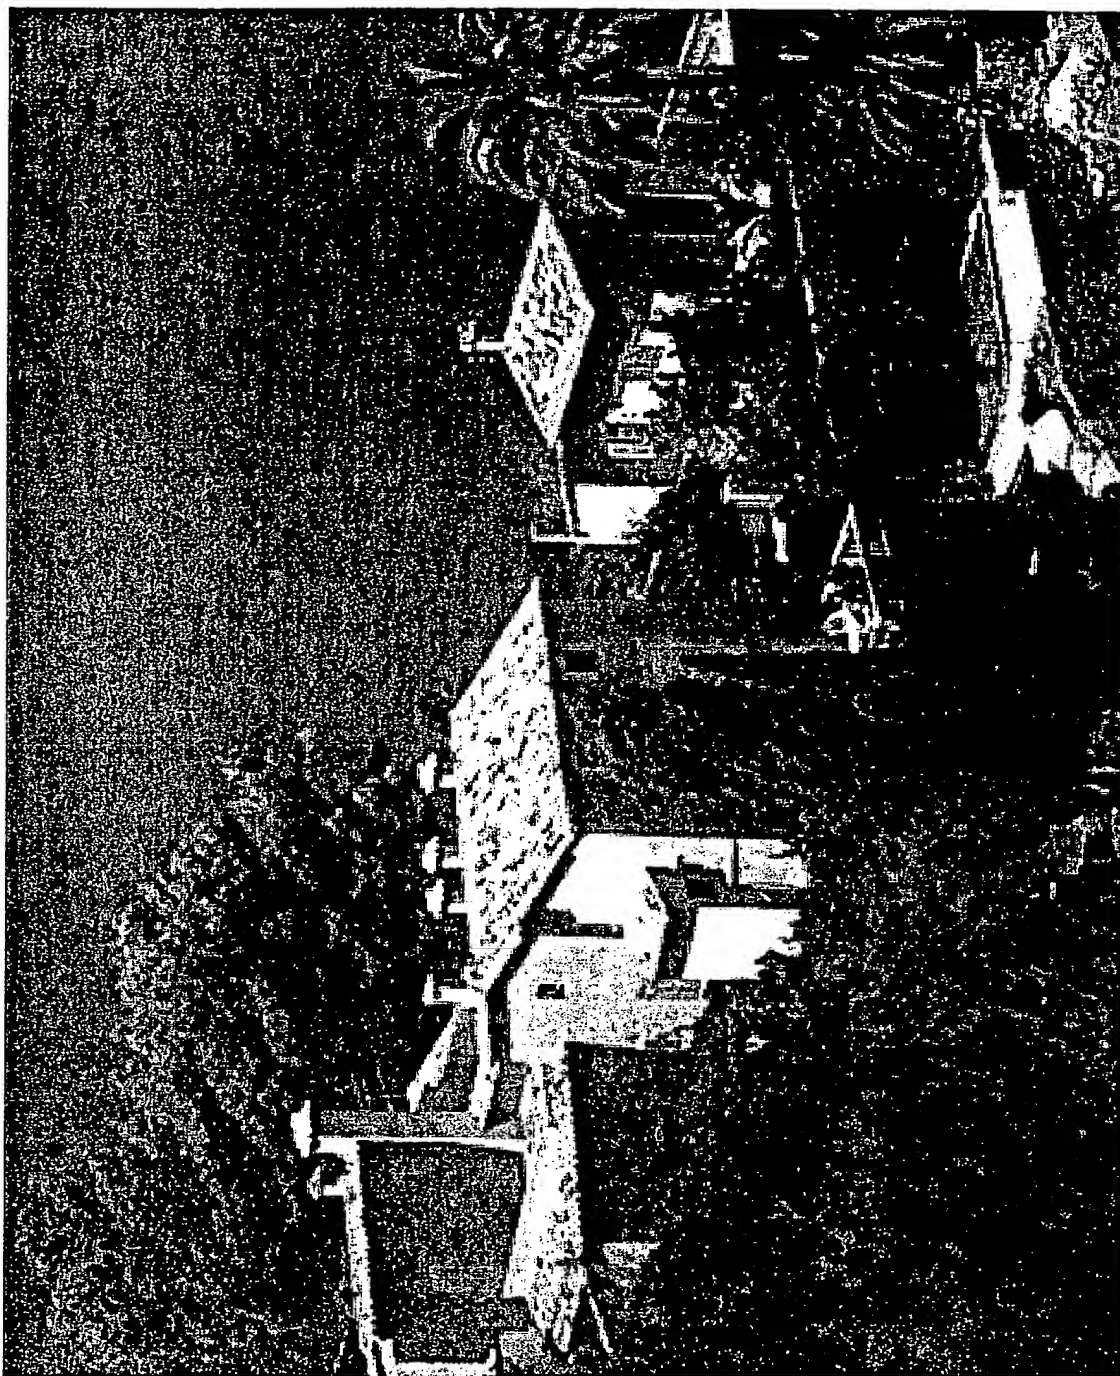 


FIG. 2

FIG. 3 is a block diagram of a user interface for a television set.

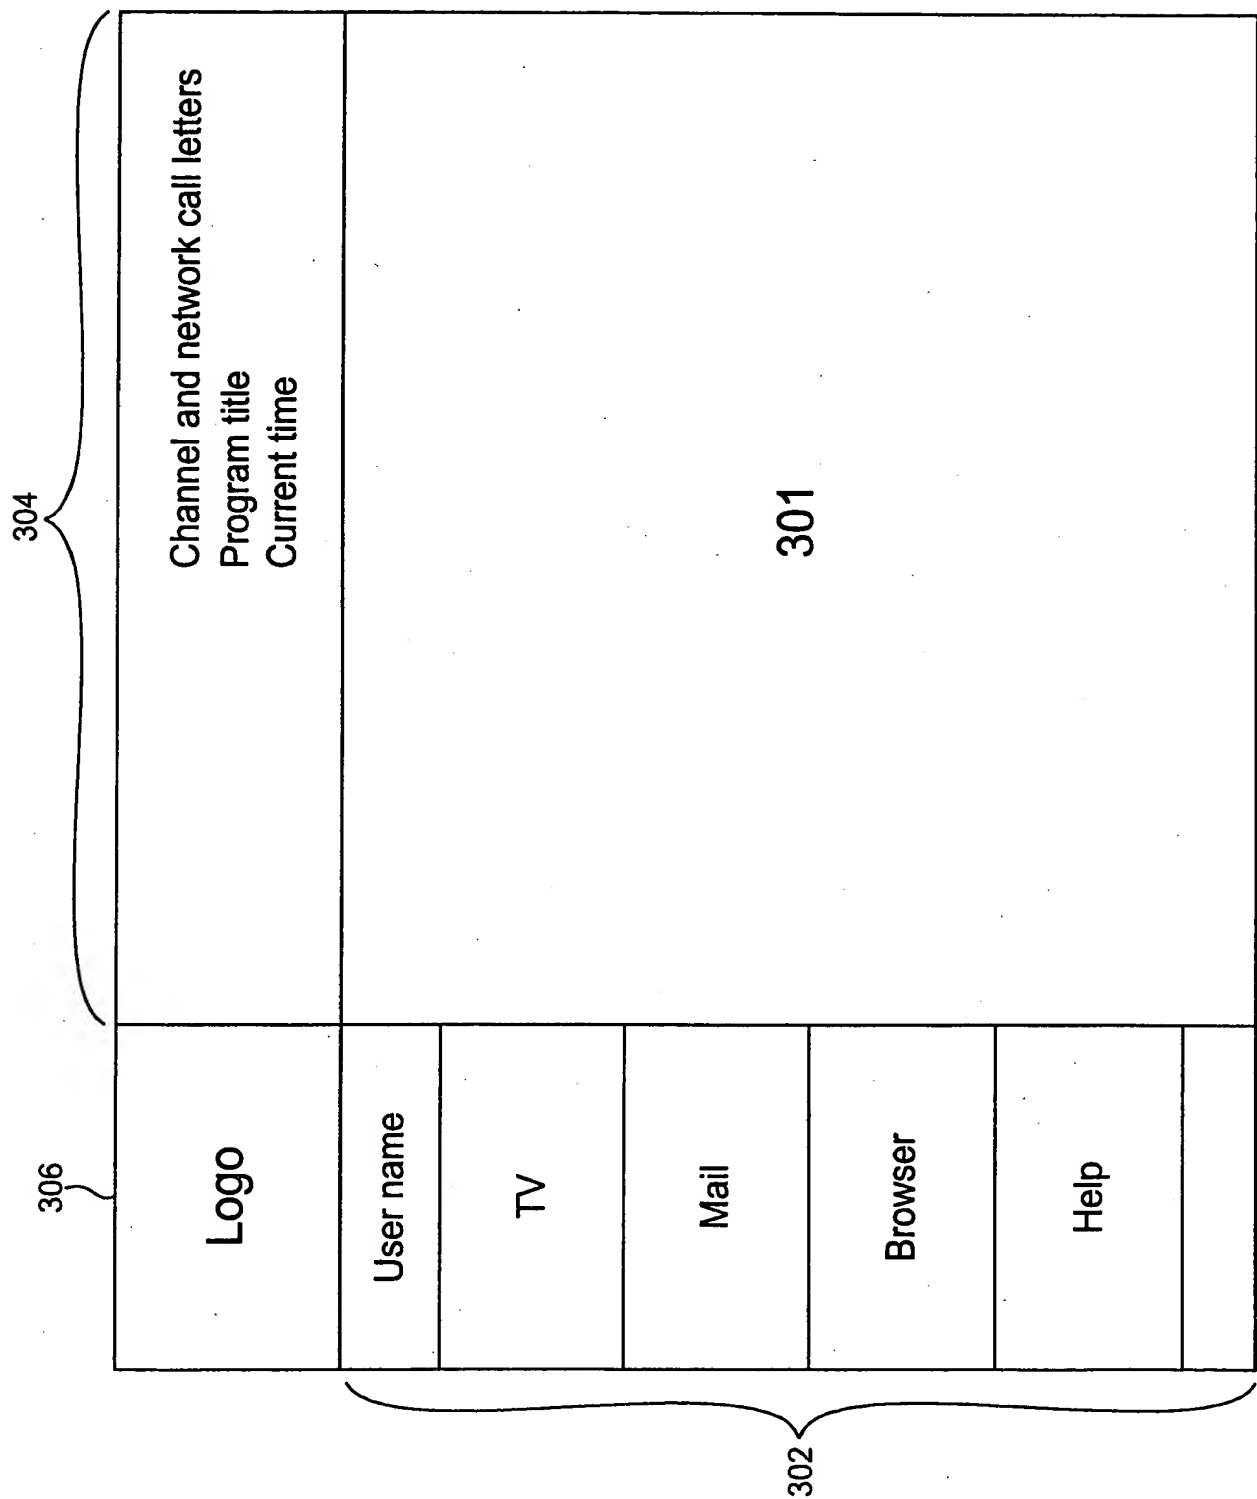 


FIG. 3

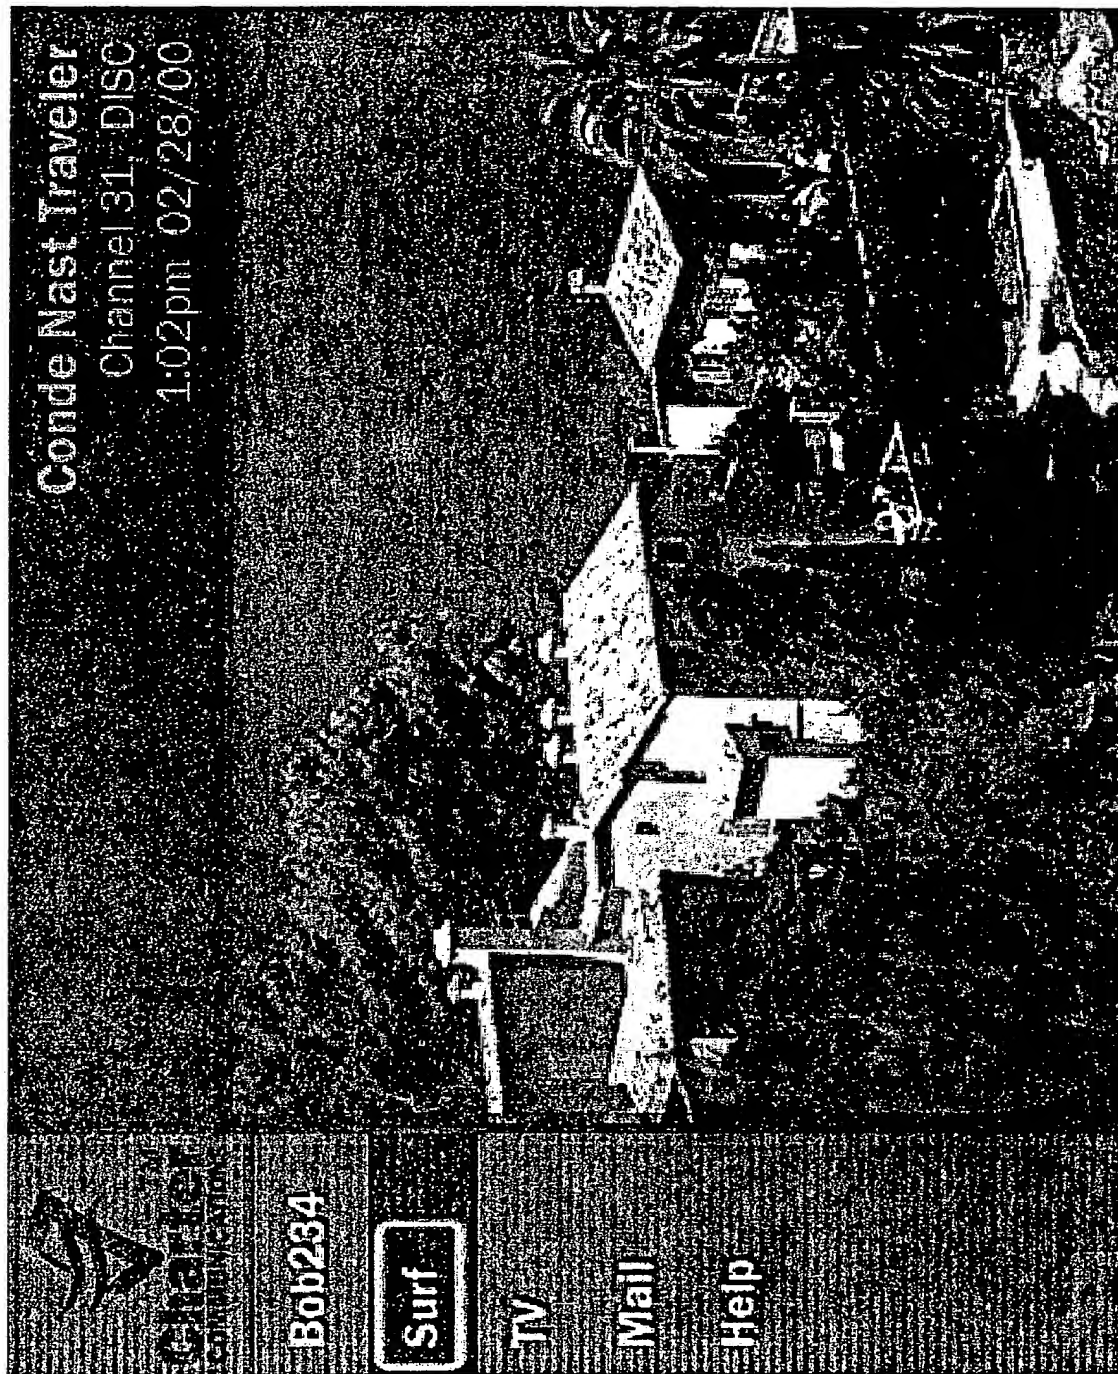 


FIG. 4

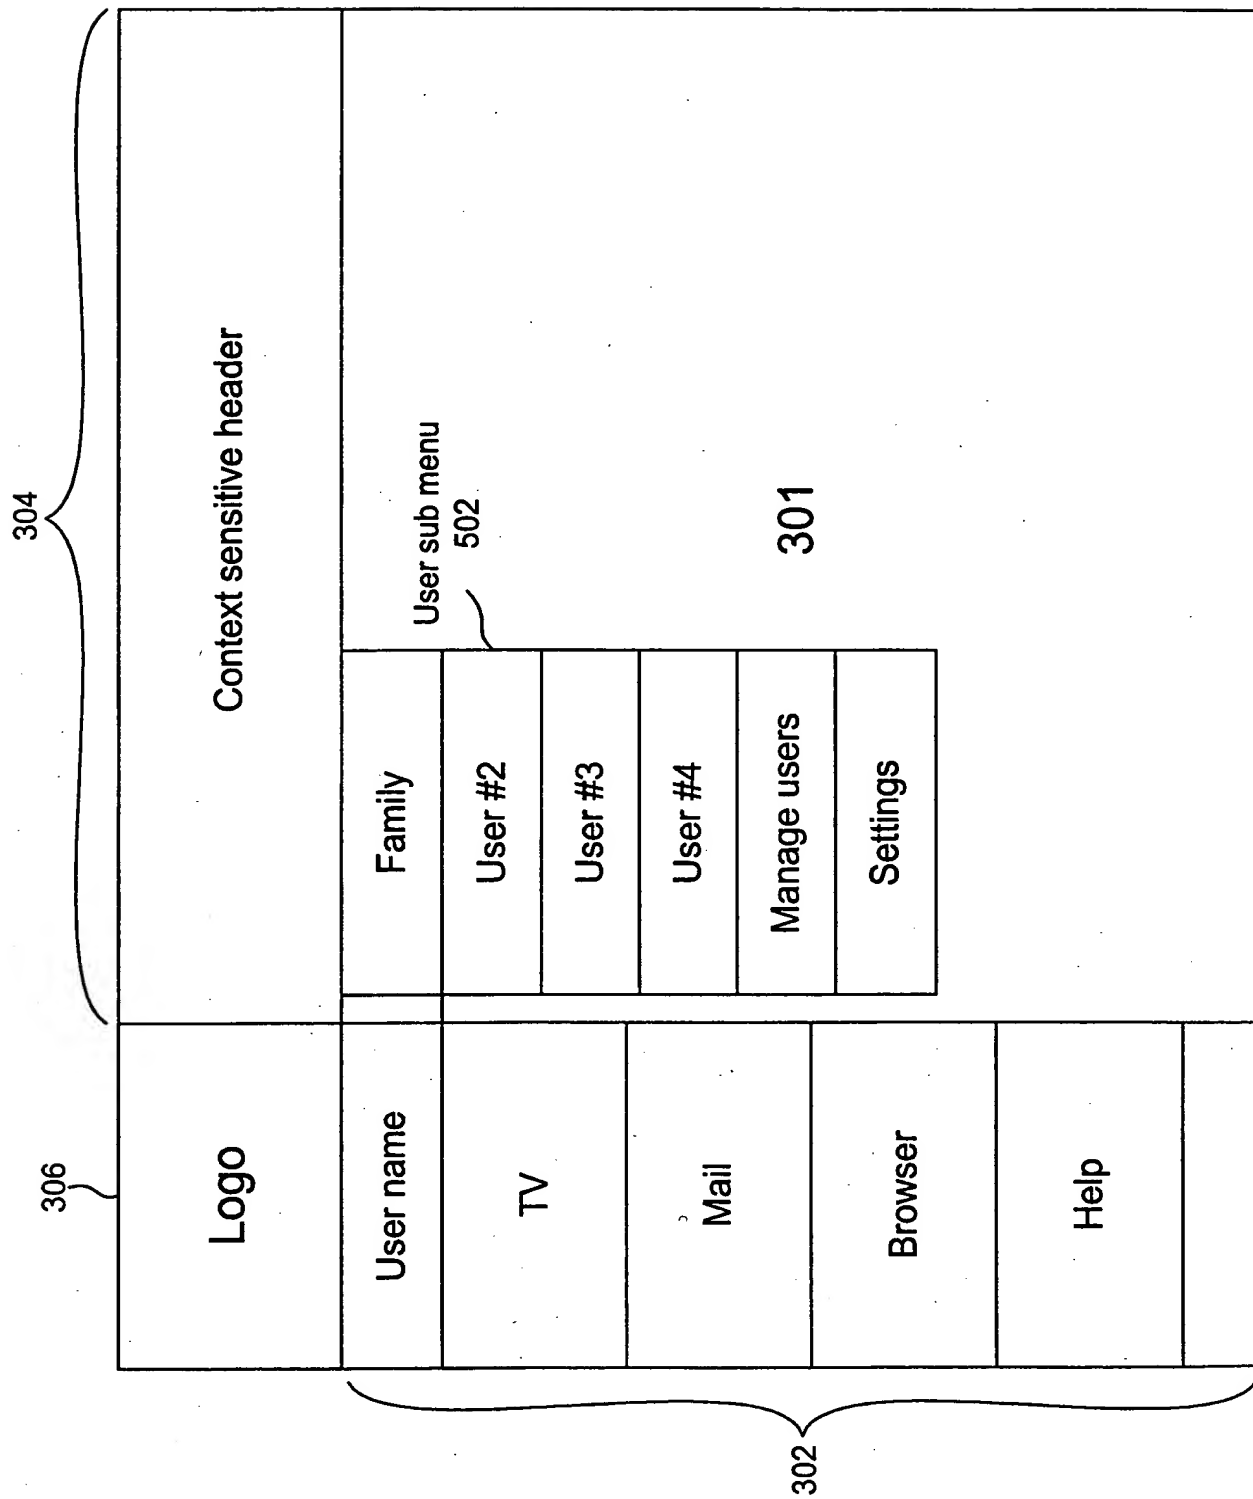 


FIG. 5

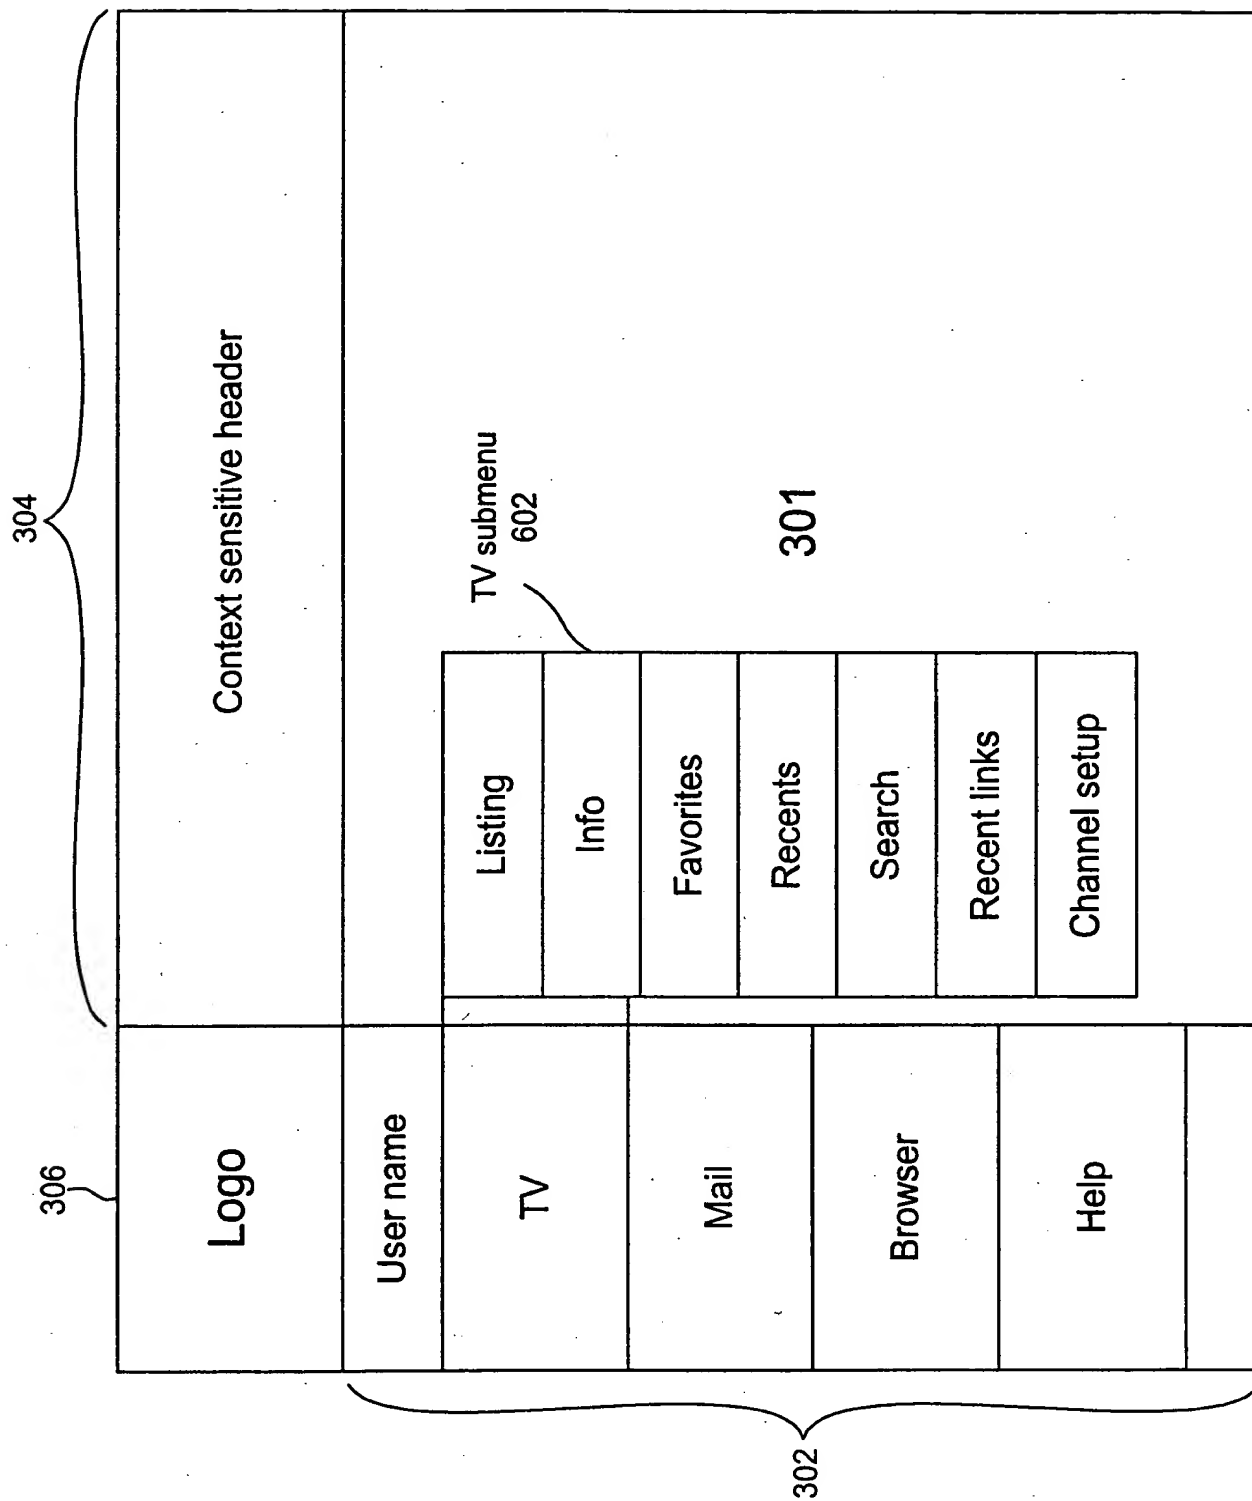 


FIG. 6

FIG. 7 is a block diagram of a user interface for a television system. The user interface includes a top bar 306, a main content area 301, and a bottom bar 302. The top bar 306 includes a logo 306, a user name field, and a set of navigation buttons 304. The navigation buttons 304 include a "Change day" button 702, a "Search" button 704, and a "Stay on channel" button 706. The main content area 301 is labeled "301 (EPG)". The bottom bar 302 includes a "TV" button, a "Mail" button, a "Browser" button, and a "Help" button.

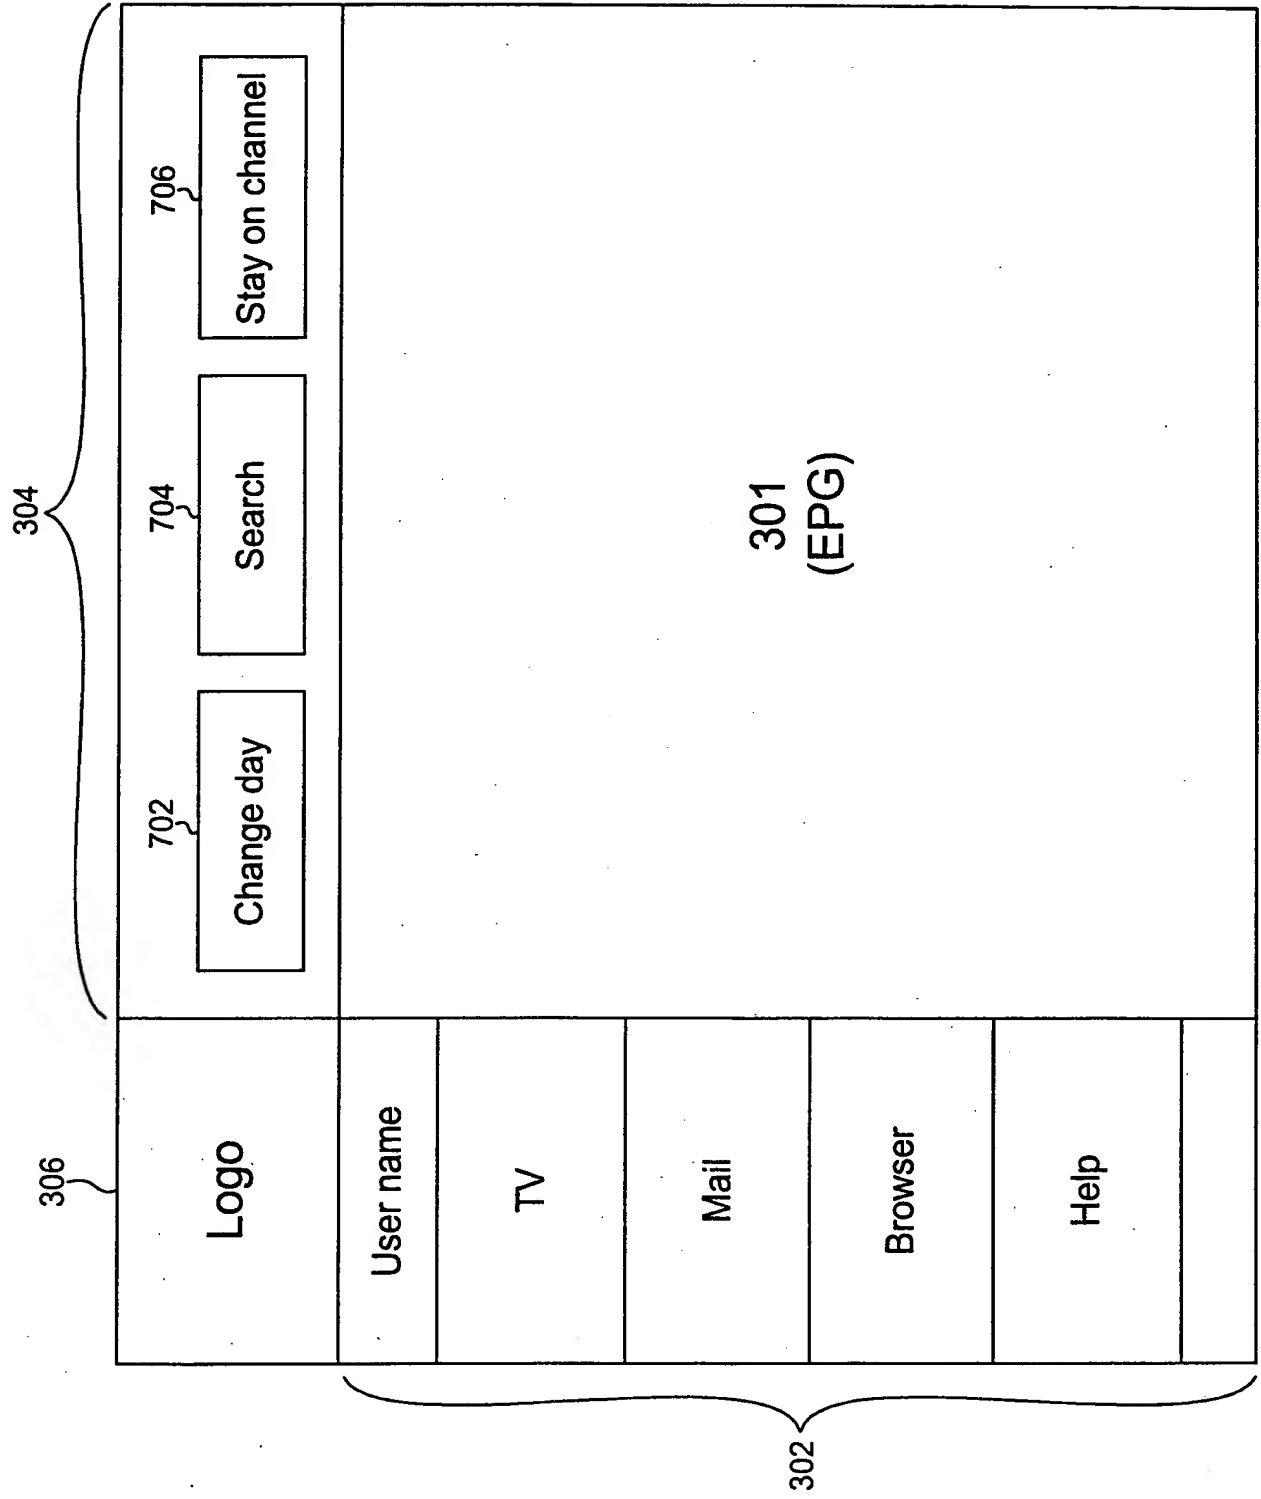 






FIG. 7

 <b>Charter</b> <small>COMMUNICATIONS</small>					
					
<b>Bob234</b>	Nickelodeon, Channel 18 Scruffy kids torment their parents and family dog.				
<b>Surf</b>	6:30pm	7:00pm	7:30pm		
<b>TV</b>	grats	Doug	Hey Arnold!		
<b>Mall</b>	A*S*H	Healthy Kids	Picket Fences ▲		
<b>Help</b>	ime Savvy	How-2 Crew	Hometime		
	TV Jams	Reindeer	BeatSuite	▲	
	irewsters Millions				

8  
G.  
F



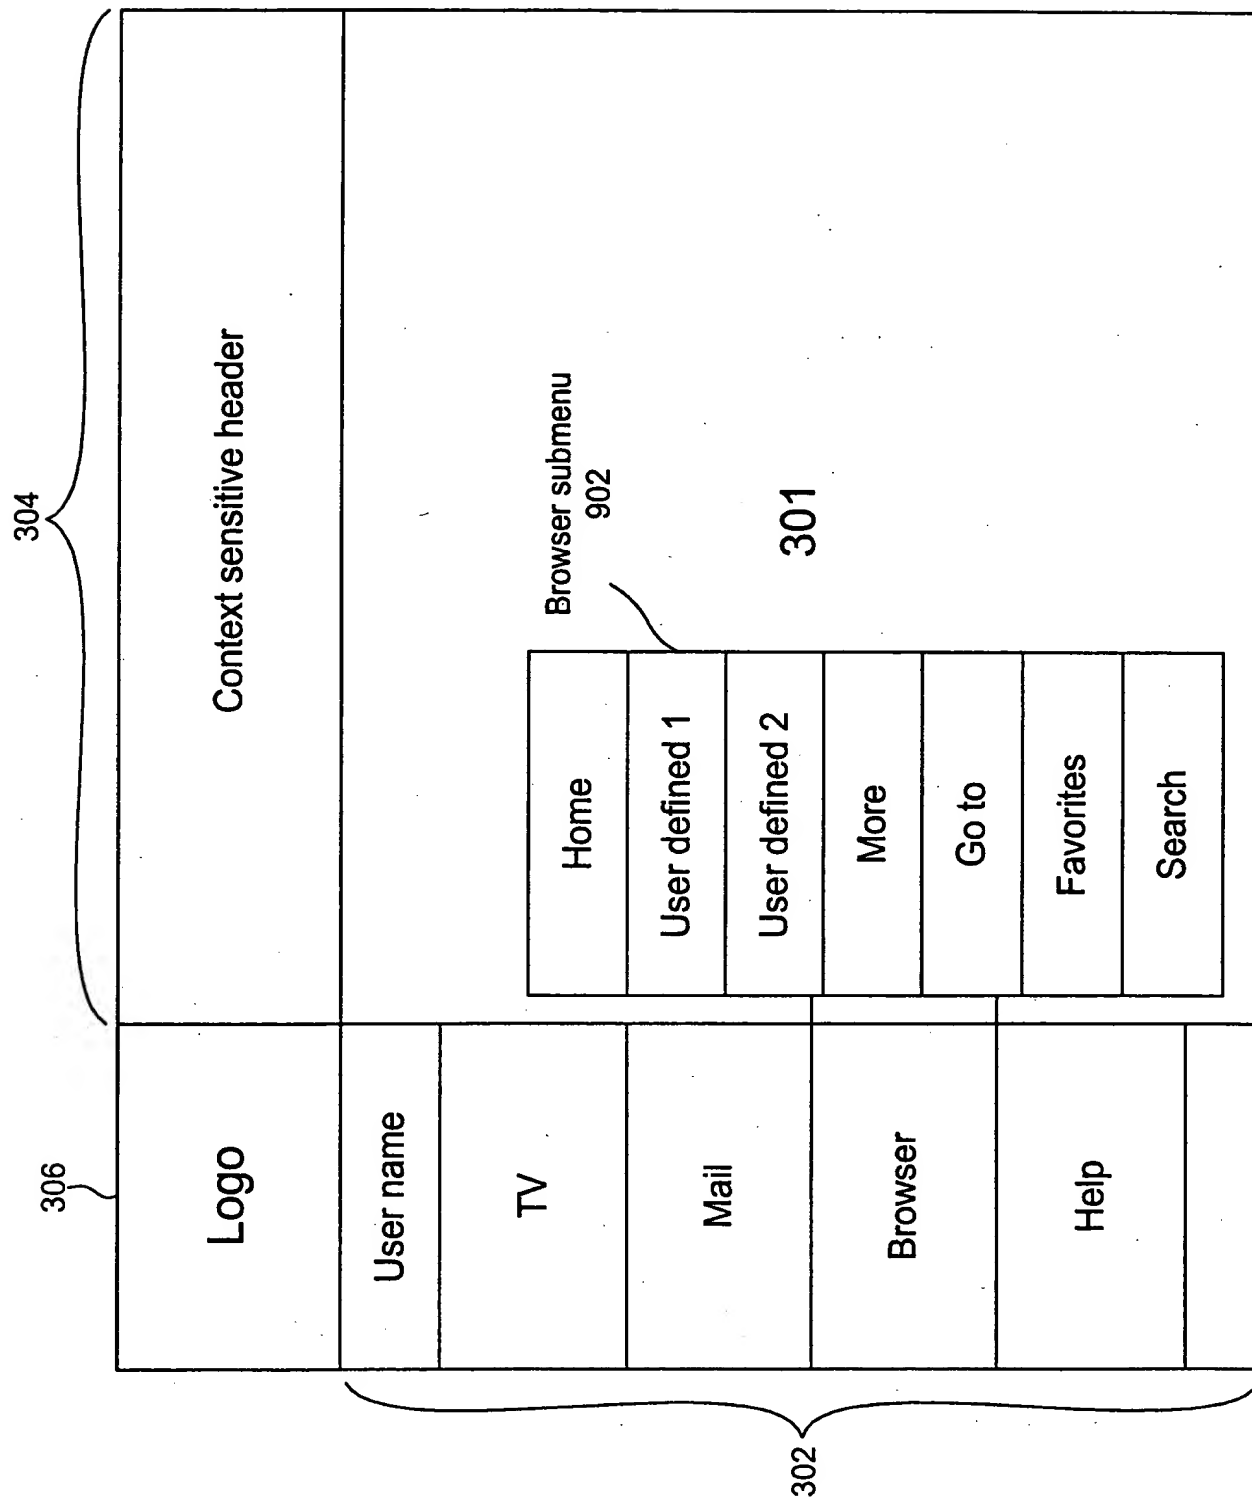 


FIG. 9

 
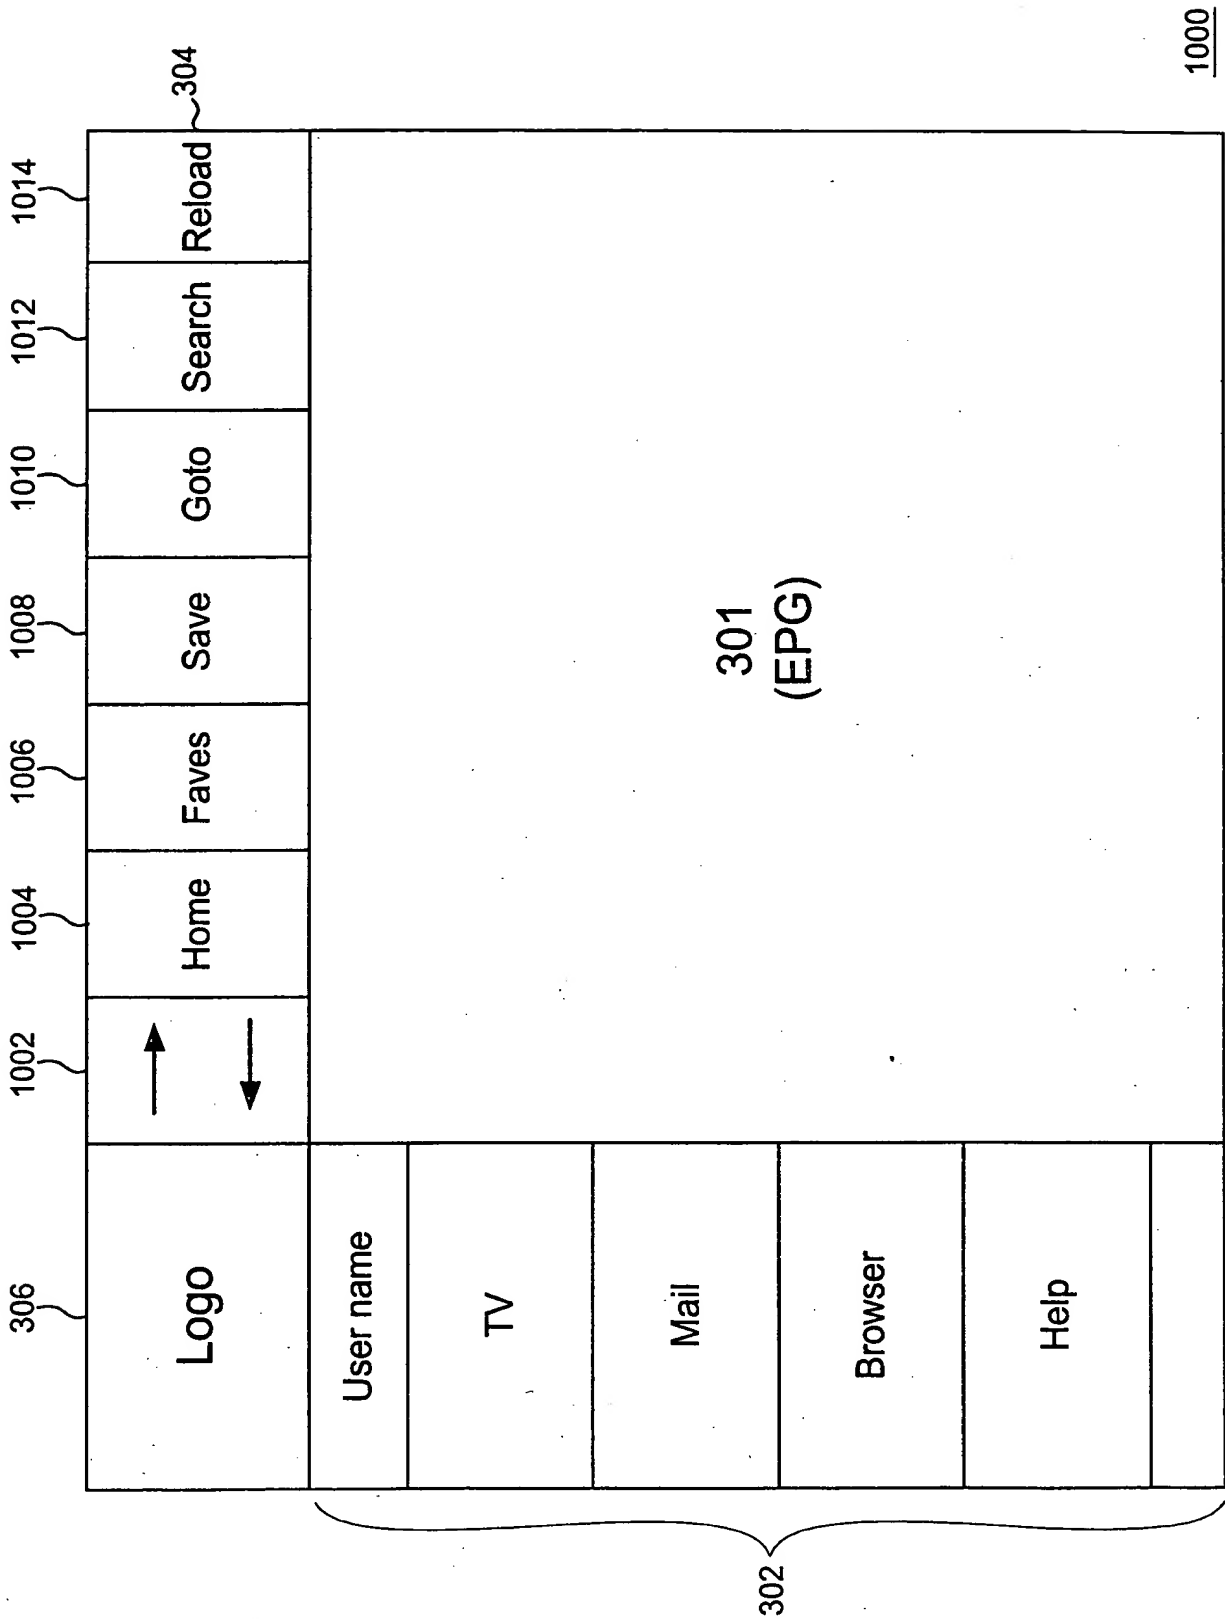 


FIG. 10

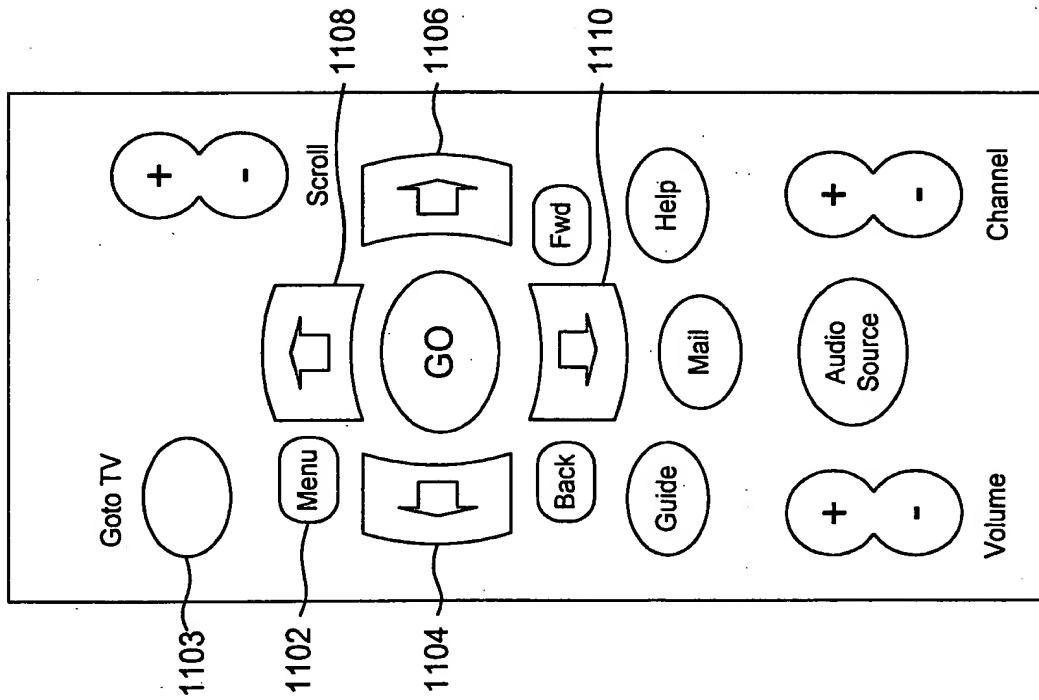

1100

FIG. 11

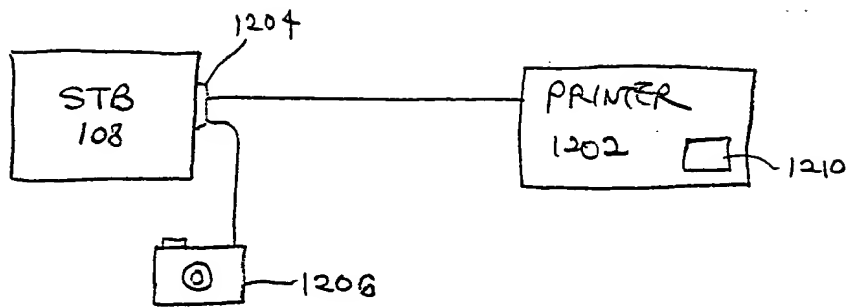 


FIG. 12

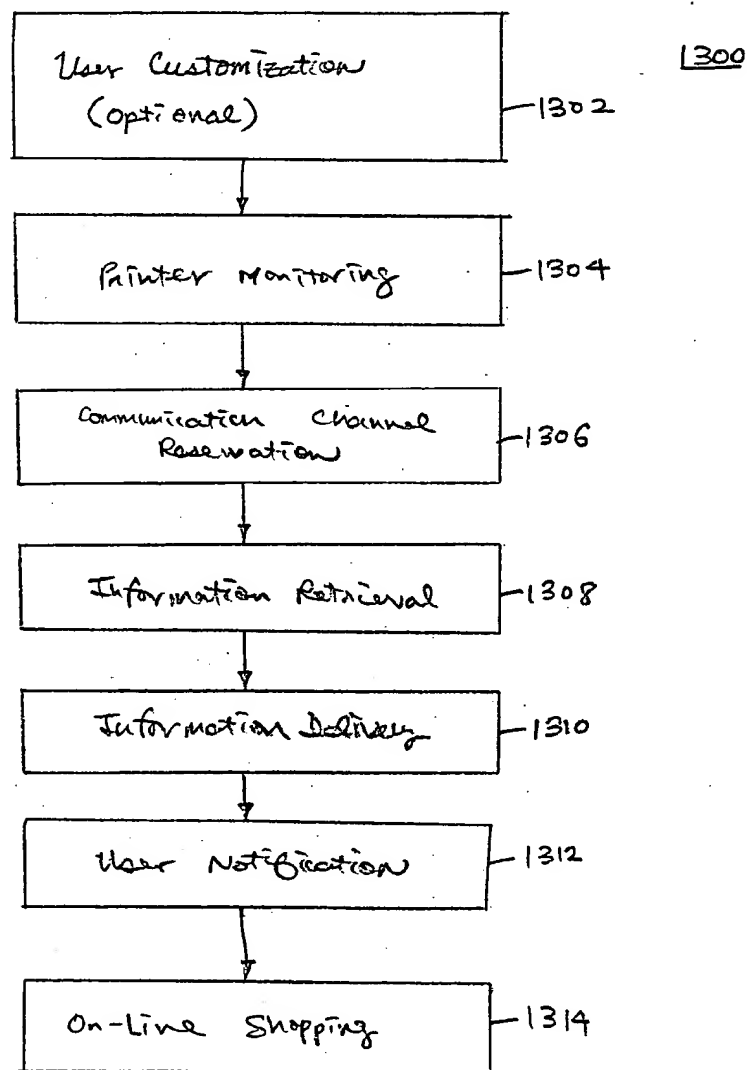 


FIG. 13

Please select notification format

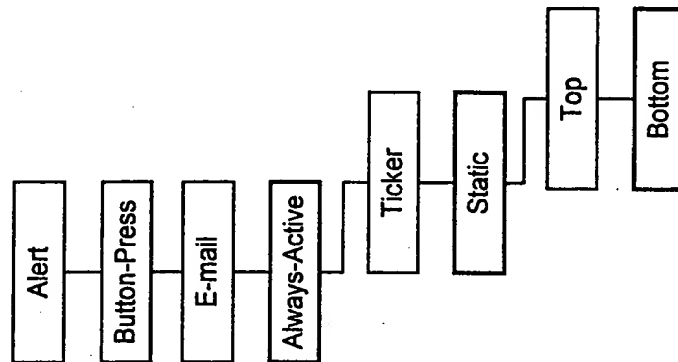 


FIG. 14

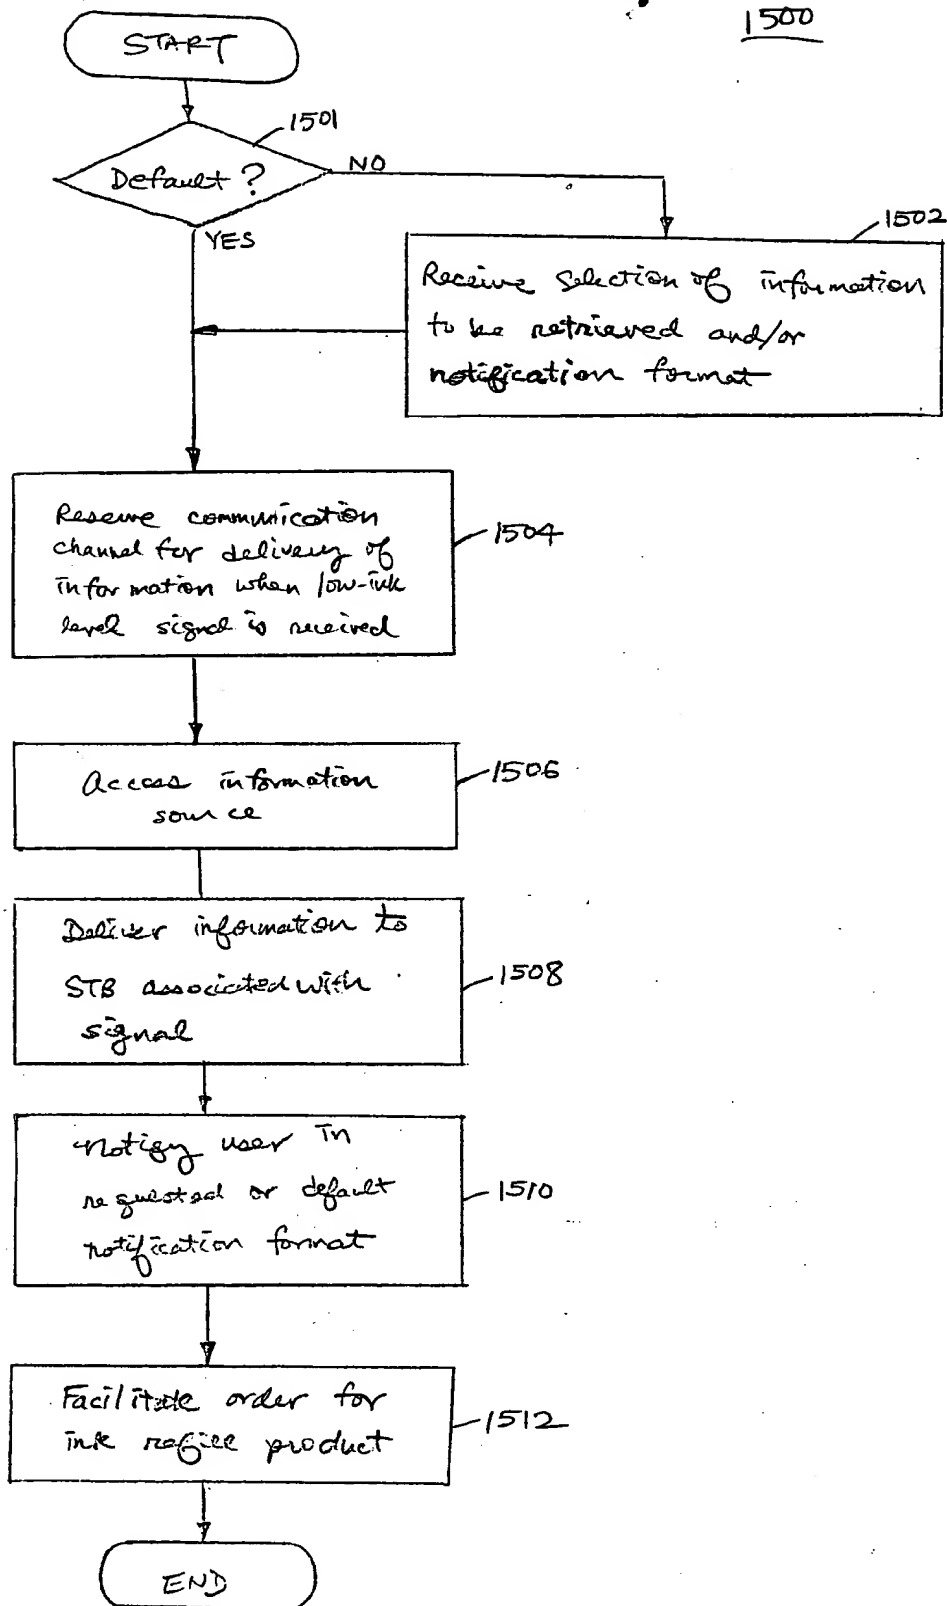 


FIG. 15